



**Model# SWPDAL**

## **Operating Instructions**

### **Installing the battery:**

The alarm requires one 9 volt battery (not included). Open the back cover by removing screws and insert the battery. See the diagram to ensure it is inserted correctly as to +/- setting. Replace cover and tighten screws.

### **Using as a personal alarm:**

To trigger the personal alarm simply pull the pin upward. The 130 dB alarm will sound and the light will flash. To stop the alarm, reinsert the pin. It can be used to protect your purse or backpack. Place the alarm inside and clip the snap hook to your belt or pants loop. If a thief attempts to steal your purse the alarm will sound.

### **Using as a door alarm:**

The unit includes a door clip accessory that can be used to secure a door (or window). Replace the pull pin and lanyard with the door clip accessory (included in the package). If batteries are installed the alarm will sound. Remove the black sleeve from the two spring-loaded metal prongs of the door clip and place the two prongs in between the door and the doorjamb. If the door is opened the prongs will separate and the alarm will sound. The feature can also be used to protect a cabinet or window or anything else that closes.

### **Using as a light:**

The light can be activated by pressing the button on the left side of the unit and holding it down. To turn the light off simply let go of the button.

### **Using as a laptop alarm:**

With the door clip feature you can also protect a laptop computer, luggage or many other valuables. Place the two spring-loaded metal prongs on the clip underneath the item. If a thief attempts to steal it the alarm will sound.

**WARRANTY:** *Streetwise Security Products* extends a ONE YEAR warranty to the SWPDAL for the product against defects in materials or workmanship, with the following exceptions:

1. The warranty does not cover damage resulting from accident, misuse or abuse, lack of reasonable care, moisture, the affixing of any attachment not provided with the product, loss of parts.
2. The warranty will be voided if the unit has been tampered with in any way (unless by an authorized dealer); or if any unauthorized replacement parts have been used.

**Conditions of sale:** Purchase of this product is an agreement by the purchaser/user to hold all sellers and manufacturers harmless of all liabilities and damages.

**To Obtain Service:** Contact the Authorized Dealer from whom you purchased this unit for a Return Merchandise Authorization. The return unit must be sent postage prepaid and proof of purchase is required. Damage or loss occurring during shipment is not covered by this warranty.